



Harmonic Art Handpan

DIRECTIONS FOR USE

care instructions

- the wax layer on the playing surface is used to prevent unwanted development of rust and to keep the steel looking as good as new and shiny
- apply the wax every couple of days or weeks, depending on the use or when the surface begins to feel somewhat dry
- please use MEINL Sonic Energy Harmonic Art Handpan Care Wax and apply it gently over the playing surface of the Harmonic Art Handpan
- do not use water or alcohol to clean it

store instructions

- store the Harmonic Art handpan in a dry place as possible to prevent rust development
- it should not get wet, avoid rain and any contact with wet hands or objects
- do not expose the handpan to extreme high or low temperature
- please use hard shell cover while storing to protect it against external shocks

tuning

- this Harmonic Art handpan is tuned to a certain scale, so there are no „wrong notes“ which sound „out of melody“, so it can be played anywhere and from any position
- this drum is designed to play with fingers and cannot be played as a traditional drum using drum sticks or other tools
- It should not be played roughly or with heavy blows, using fingertips are enough to hear the warm resonance and to avoid any unwanted musical detuning or distortion